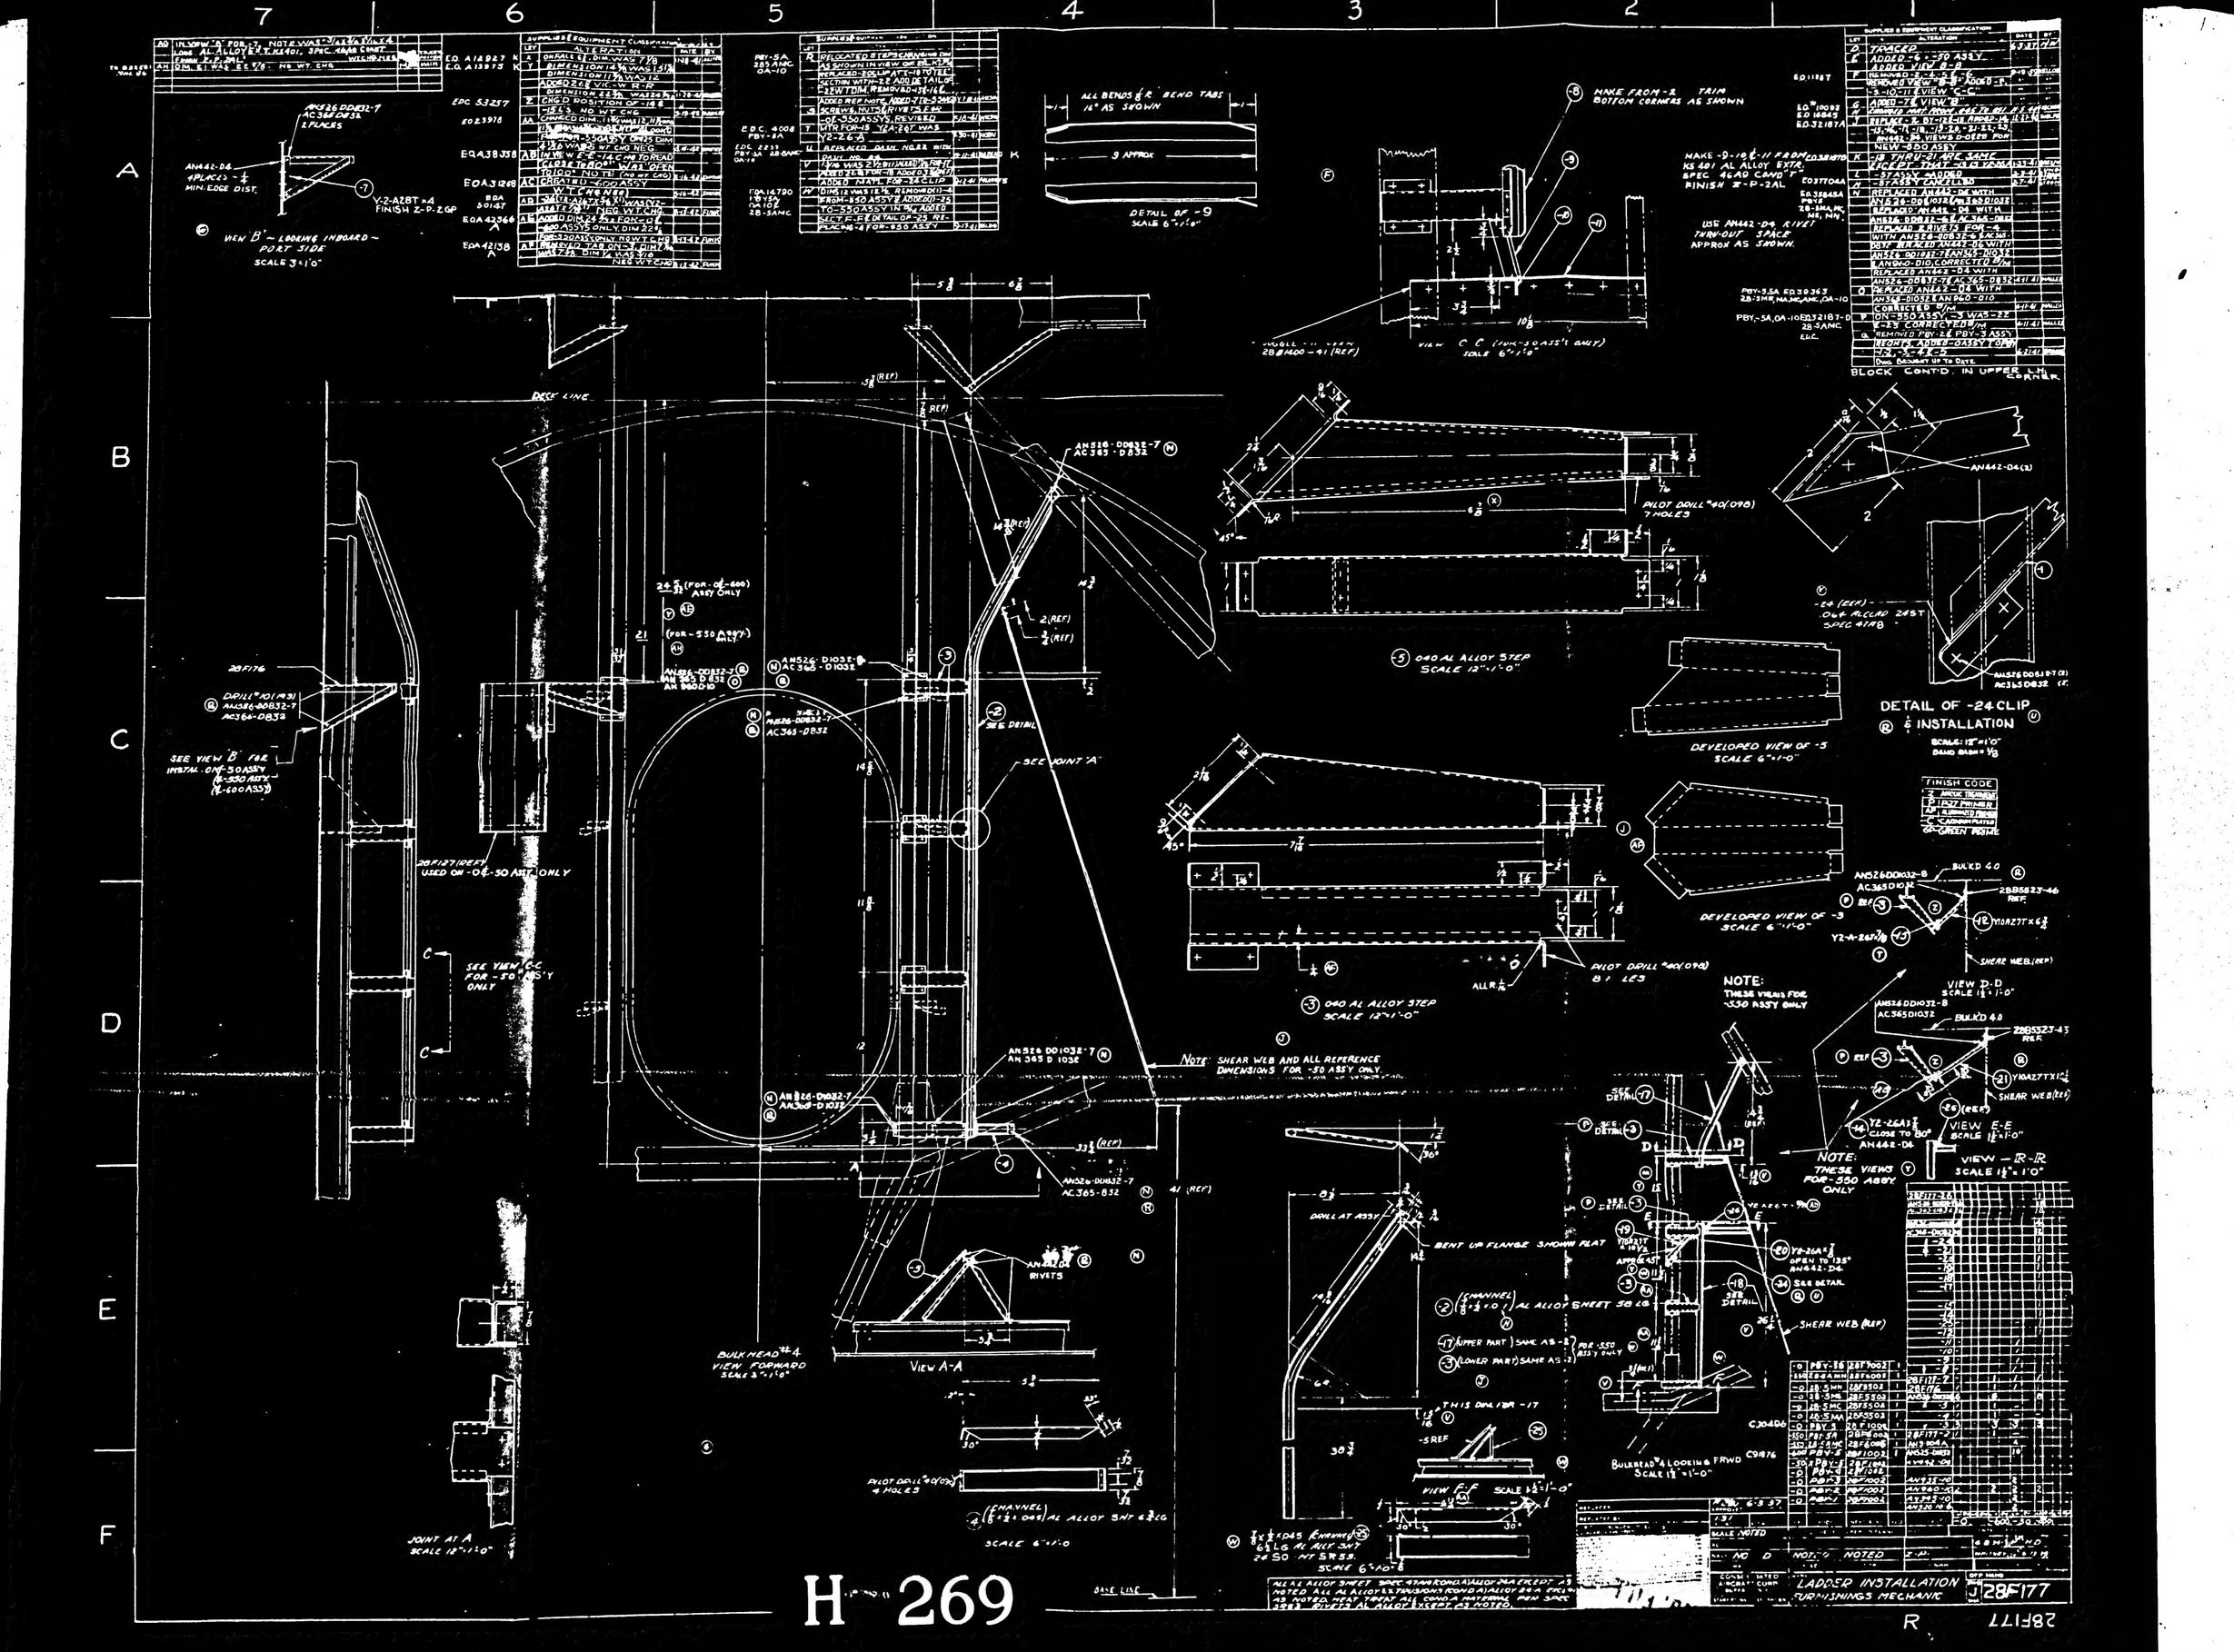
LADDER INSTALLATION
FURNISHINGS MECHANIC
28F177
H 269
DETAIL OF -24 CLIP & INSTALLATION
VIEW B' ~ LOOKING INBOARD ~ PORT SIDE
SCALE 3"=1'0"
DETAIL OF -9
SCALE 6"=1'0"
VIEW C-C (FOR -50 ASS'Y ONLY)
SCALE 6"=1'0"
-5 .040 AL ALLOY STEP
SCALE 12"=1'-0"
DEVELOPED VIEW OF -5
SCALE 6"=1'-0"
-3 .040 AL ALLOY STEP
SCALE 12"=1'-0"
DEVELOPED VIEW OF -3
SCALE 6"=1'-0"
VIEW D-D
VIEW E-E
VIEW -R-R
VIEW A-A
BULKHEAD #4 VIEW FORWARD
BULKHEAD #4 LOOKING FRWD
VIEW F-F
JOINT AT A
NOTE: SHEAR WEB AND ALL REFERENCE DIMENSIONS FOR -50 ASSY ONLY.
NOTE: THESE VIEWS FOR -550 ASSY ONLY
NOTE: THESE VIEWS FOR -550 ASSY ONLY
DECK LINE
BASE LINE
SEE VIEW B' FOR INSTAL. OF -50 ASS'Y (-550 ASS'Y) (-600 ASS'Y)
USED ON -0 & -50 ASS'Y ONLY
SEE VIEW C-C FOR -50 ASS'Y ONLY
SEE JOINT 'A'
SEE DETAIL
BLOCK CONT'D. IN UPPER L.H. CORNER.
FINISH CODE
BENT UP FLANGE SHOWN FLAT
SHEAR WEB (REF)
PILOT DRILL #40(.098) 7 HOLES
PILOT DRILL #40(.098) 81 LES
DRILL AT ASSY
THIS DWG 128F-17
SCALE NOTED
NOTED